

Easy fitting guide

A Close window and mark where you want to fit the Securistay™ sash plate on opening frame. This must be at least 180mm from bottom of window.

B Use template to mark hole positions on opening and fixed frame.

Note: If using packers (1,2 or 5) mark hole positions allowing for thickness of packers. **C**

D Ensure inside face of sash plate is clean and dry. Remove backing strip from anti-rattle pad and place on inside face of sash plate, between fixing holes.

E Screw sash plate to opening frame using top hole only. If windows are draught proofed, packer (marked 5) may be required. Screw frame plate to fixed frame using 3 screws ensuring the open side of hooks is facing sash plate.

Close window. Arm should automatically engage in sash plate.

Open window to test operation. Fit bottom screw in sash plate removing arm if necessary.

Operation - When the hook is engaged into sash plate ensure it is locked in position **F**. The Window can then be opened only as far as the Securistay™ will allow. To disengage unlock the sash plate, push arm upwards and open window.

Safety Tip - we recommend Securistay is fitted to all upstairs windows particularly in children's rooms.

Security Tips - always close and lock windows, and remove keys from locks when leaving the house.

For extra security we recommend fitting ERA Snaplocks Ref: 801/802/904.

