

Technical Support

 +44(0)845 8381716

 support@paxton.co.uk

Technical help is available: Monday - Friday from 07:00 - 01:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)

Further documentation on all Paxton products can be found on our web site - <http://www.paxton.co.uk/>

Quickstart guide

This supplement is a brief guide to installing a TOUCHLOCK K series compact system. Further information is available for download at: <http://www.paxton.co.uk/>
or call the communications team on: **+44 (0)845 838 1716**.

Fitting



Keypad bezels


Additional bezels are available in black, white, grey, blue and silver. Registered installers can order these free of charge by logging onto the secure installer extranet: <https://extranet.paxton-access.co.uk/index.asp>

If you are not a registered installer please call us on: **+44 (0)845 838 1716** for more information.




The declaration of conformity may be consulted at: <http://paxton.info/596>

Wiring

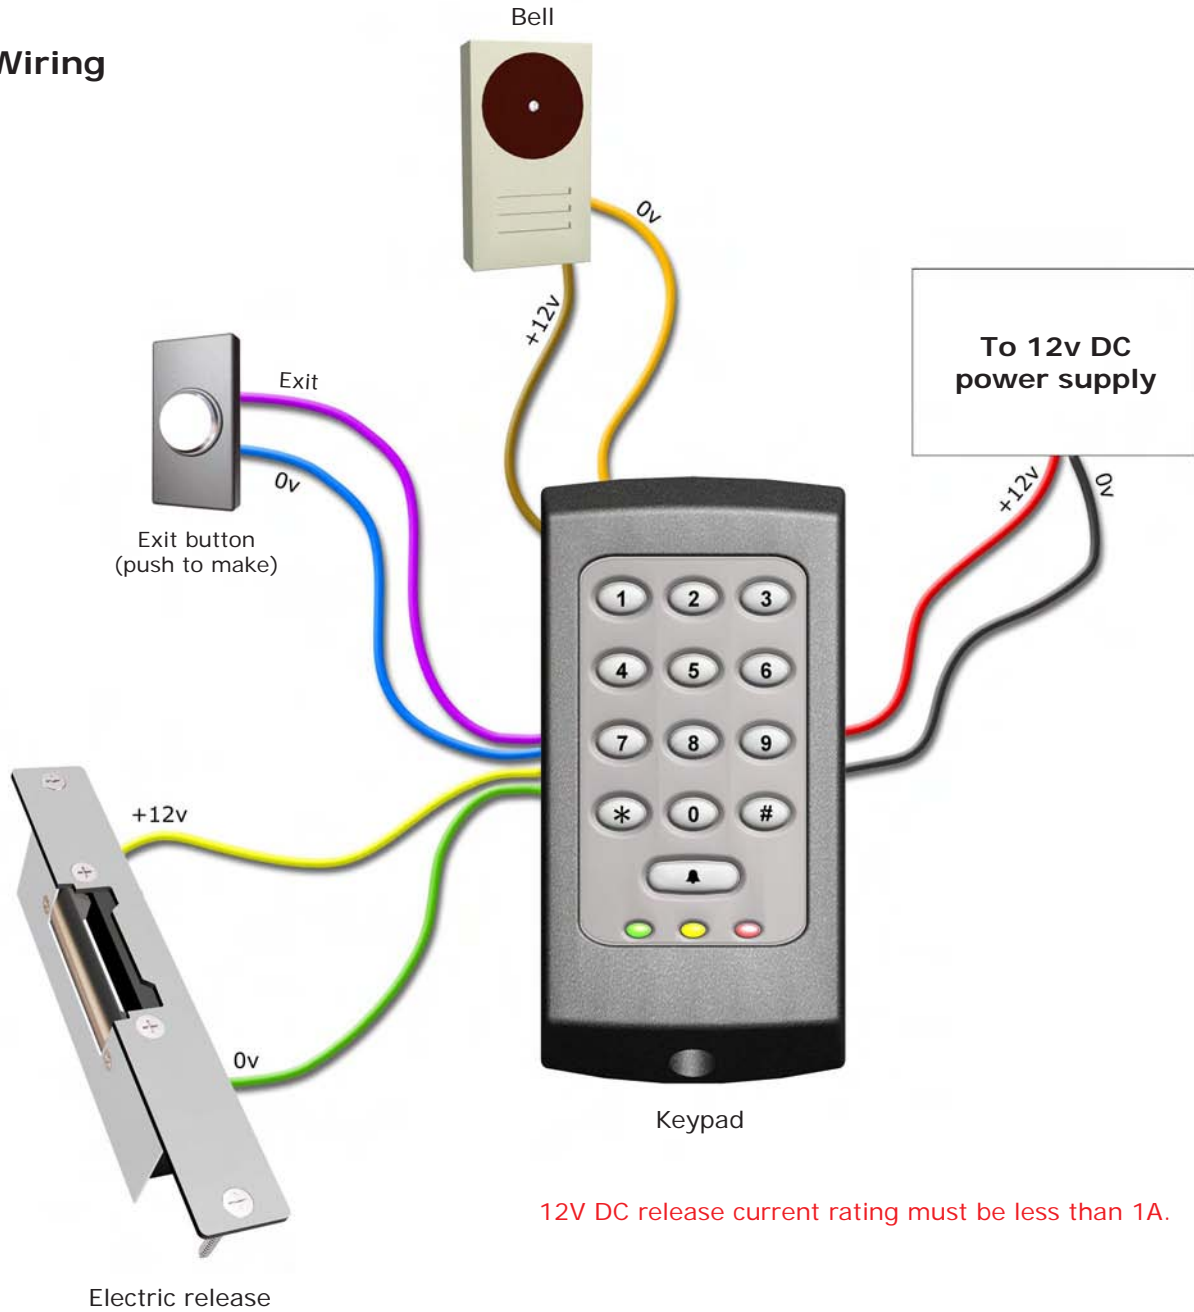


12V DC release current rating must be less than 1A.

Wire outputs

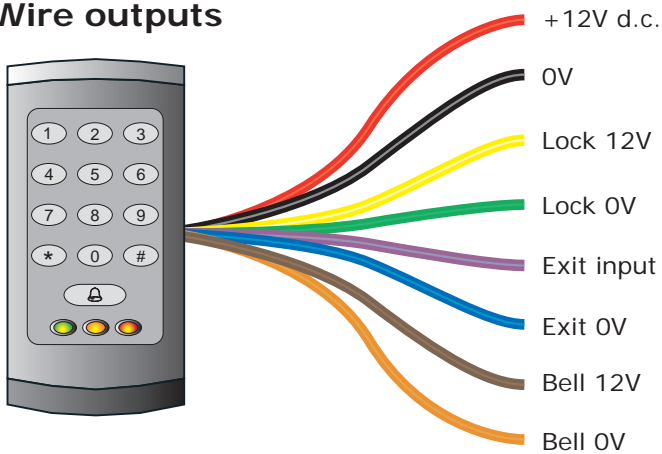

Screw connector wiring

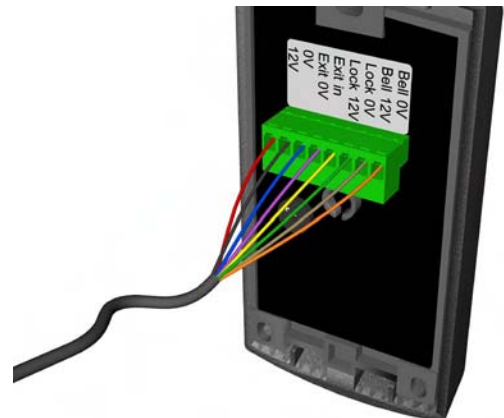

Full System Reset

1. Power down the system.
2. Power the system up whilst pressing and holding 3
3. All 3 LED's will flash and the unit will beep 3 times a second.
4. Go to TOUCHLOCK programming guide - see opposite

TOUCHLOCK programming guide

The first time the system is powered up the control unit will beep 3 times a second.

This indicates the unit needs programming.

A 6 digit Programming Code must be set by the user first. To do this press the following:

IMPORTANT NOTE: Do not set the Programming Code to 123456
 The programming code must not contain the same string of digits as the user code.
 For example the default user code is 1234 - the programming code must not be set to 123456




Programming Code

The factory User Code is now set to 1234

The 6 digit Programming Code gives you access to the programming menu shown below

Hold for 3 secs

6 digit Programming Code

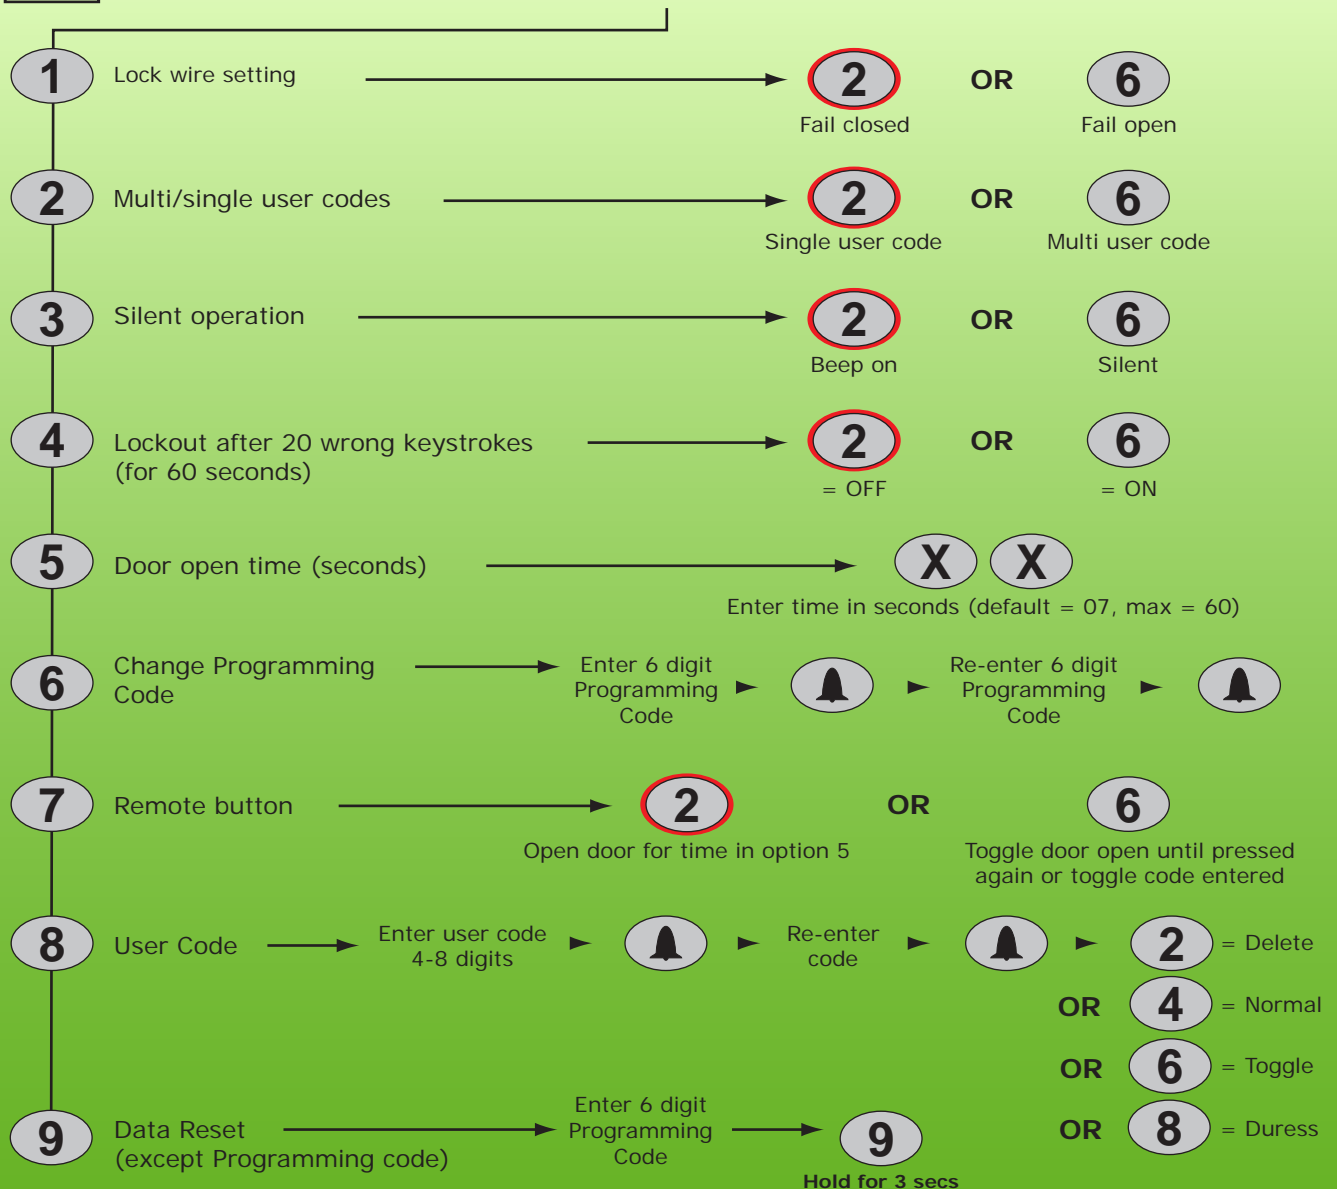

= default