



BP50 Bulldog Bayonet Post Fitting Instructions

(Suitable for most caravan hitch heads Alko and Albe, without stabilisers).

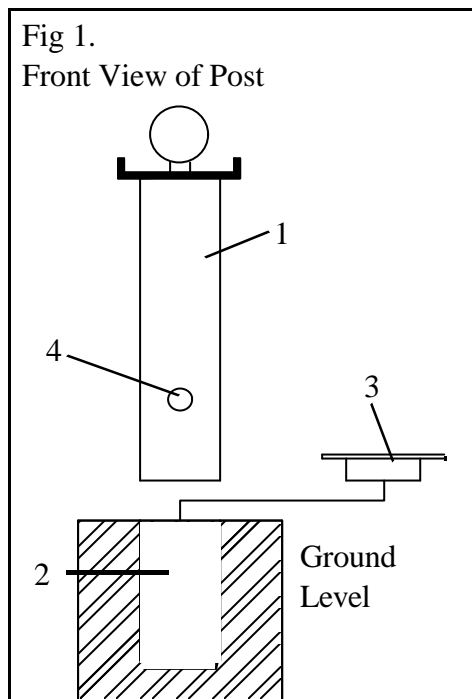

- 1) Post Assembly
- 2) Socket
- 3) Cover Plate
- 4) Side Locating Pin

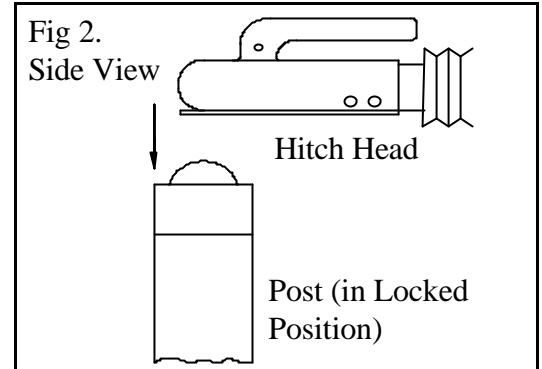

Registered Design No 2099566

1. Examine the post tube assembly and its receiver socket, note the fully locked position. This is the position in which the socket and post need to be installed.
2. Excavate out a hole approx 300mm deep (12") preferably in solid concrete or tarmac and instal the socket and post (in the fully locked position) so that the 'U' shaped flange at the top of the ball is in line with the caravan hitch head. See Fig 2. This will allow the attachment of the hitch head of the caravan to couple onto the ball, and therefore prevent post being twisted and removed.
3. Concrete around the socket up to ground level, then allow to dry.
4. To secure the caravan to the top of the post simply hitch the caravan onto the top ball then secure the hitch head with the Bulldog Mini Lock.
5. To remove the post, uncouple caravan and twist post out of the ground, fit the cover plate provided to prevent ingress of dirt into the socket. Keep socket clean to ensure ease of use.



We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.