


Bulldog BR10 Mini Lock Fitting Instructions

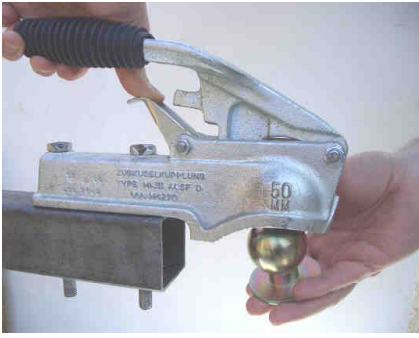

1. Insert the dummy ball when the trailer is unhitched by lifting the handle upwards, push the dummy ball into the socket and lower the handle. Insert the key into the lock and turn it a quarter turn anticlockwise, remove the lock bolt from the hitchlock and leave in the unlocked position.



2. With the blanked end of the bottom channel nearest the towing socket, position the channel under the hitch. With the open end of the top box nearest the towing socket place it over the bottom channel.



3. With the top box resting on the top of the handle of the hitch, position the bottom channel so both sets of holes line up.



4. With the lock bolt in the unlocked position, insert it through the holes, place the cup over the end of the locking bolt and lock in position by turning the key a quarter turn clockwise.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.



WARNING. Before unlocking Mini Lock with keys provided, please remember to support base with hand - i.e: Mind your feet.

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray outside of lock body with WD40 (or equivalent) minimum every four months.

Key Security. Enter your key number here:

IMPORTANT - Your Bulldog product is supplied with two keys. Make a note of your personal key number in the space provided above and **keep it in a safe place**. Should you lose your keys, replacements can only be obtained from the manufacturer through your dealer.