

LC8 Fitting Instructions.



Car plate (bracket) for swan neck or tubular towbars of 30mm to 43mm diameter.

Caution: Must only be fitted to round/circular towbars. **MUST NOT BE FITTED TO TAPERED TOWBARS.**

1. Assemble the slotted bracket to the main bracket with M12x70 bolt (1), washer and lock nut (2). Do not tighten at this stage. Assemble the main bracket and 'vee' bracket around swan neck towbar and tighten up nuts and bolts (3-6) sufficient to hold brackets in position. (Please ensure that the position of the assembly on the towbar does not interfere with the movement of the caravan hitch).

2. Rotate the slotted bracket until the slot is horizontal. Tighten M12x70 bolt (1) and lock nut (2).

3. Clamp up main bracket and 'vee' bracket firmly onto towbar. (Tighten up alternative bolts so that the gap between is even).


4. Insert the socket screw (7) into the 'vee' bracket and tighten with the hexagon key. Lock in place with lock nut (8).

5. Assemble remainder of stabiliser as per standard fitting instructions.

6. After use, approx 50 to 100 miles, check tension on all fasteners.

Parts List.

2 off M12 x 80 Bolts	1 off M12 x 70 Bolt
3 off M12 Nyloc Nuts	6 off M12 Washers
1 off M8 Grub Screw	1 off M8 Lock Nut

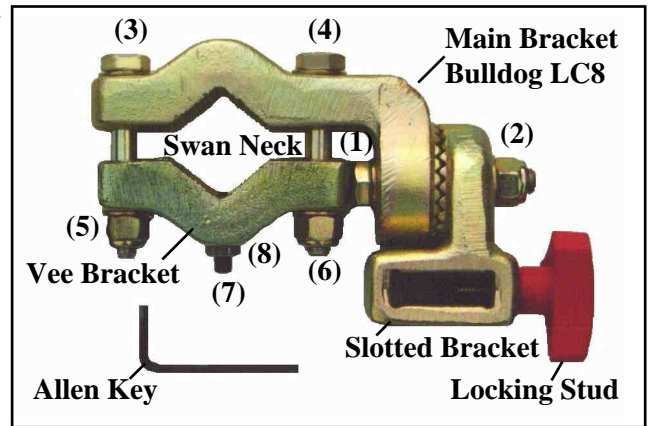

Copyright Bulldog Security Products Limited.

ST67-3