


Bulldog Lorry Door Lock LD100 Fitting Instructions

Before fitting door lock decide on which door handle can be best immobilised to prevent the other door opening. If there is no overlap between the two doors, two LD100 locks may be required.

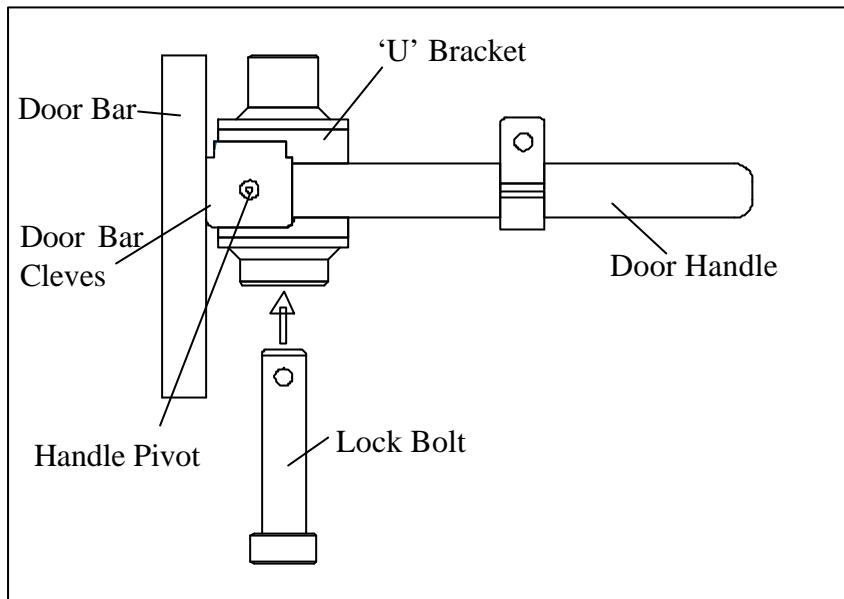

Parts List

- 1 off Door Bracket
- 1 off Lock Bolt
- 2 off M12 x 50 CSK Bolts
- 2 off Nyloc Nuts
- 1 off Back Plate
- 1 off Dust Cap

Fitting

1. Hold up door bracket against rear door and mark out hole positions for fixing bolts. The bracket should be positioned as close to the door bars as possible but allow clearance between the lock bolt and the handle pivot.
2. Drill 2 holes 13mm (1/2") through rear door.
3. Attach 'U' bracket with M12 x 50 countersunk bolts and fix re-inforcing back plate inside door. Fit the 2 nyloc nuts inside door and tighten.

To Operate Lock.

To Unlock Insert key, rotate 1/4 turn anti clockwise and withdraw Lock Bolt.

To Lock With Lock Bolt in unlocked position insert through 'U' bracket to retain door handle, then rotate key 1/4 turn clockwise to lock. Fit dust cap over lock bolt head.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray outside of lock body with WD40 (or equivalent) minimum every four months.

Key Security. Enter your key number here:

IMPORTANT - Your Bulldog product is supplied with two keys. Make a note of your personal key number in the space provided above and **keep it in a safe place**. Should you lose your keys, replacements can only be obtained from the manufacturer through your dealer.



VDL-01

Patent No 2 337 079