

Bulldog Mini Lock Fitting Instructions

Please Note: Exact hitch model may vary from illustration, however fitting procedure remains the same.

Warning: Under no circumstances should you use this Mini Lock or any other type of Hitchlock when actually travelling. **When fitting to AKS 2000, 2500, and 2004 Hitch Stabiliser handle (1) must be raised, then rested back against red plastic cover once Mini Lock is fitted.**



AKS 2000
AKS 2500
AKS 2004




1. Insert dummy ring plate. If hitch handle is in raised position the plate can be used to release handle.



2. Offer up bottom channel. (Note for AKS1300 a cut out is provided to fit around red handle).



3. Place powder coated top box over bottom channel -

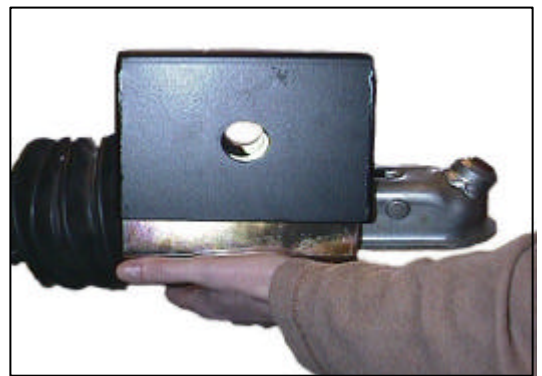

4. and lower until holes in both line up.



5. Insert locking bolt.



6. Push cup over end of locking bolt. Turn key quarter turn clockwise to lock and remove key. Fit red plastic cover.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal

WARNING. Before unlocking Mini Lock with keys provided, please remember to support base with hand - i.e: Mind your feet.

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray outside of lock body with WD40 (or equivalent) minimum every four months.

Key Security. Enter your key number here:

IMPORTANT - Your Bulldog product is supplied with two keys. Make a note of your personal key number in the space provided above and **keep it in a safe place.** Should you lose your keys, replacements can only be obtained from the manufacturer through your dealer.



ML58-5