

# Locks 4 Vans Lock Defender Instructions




Tools Required: Clean cloth, Pencil, Drill, 3.5mm drill bit, Silicone gun, Black silicone, Rivet gun

## Parts supplied per door:

- 1 x Fitting instruction sheet.
- 1 x Pre-drilled stainless steel backplate.
- 1 x Moulded plastic face cover.
- 4 x 3.5mm rivets.

1. Clean area around door lock, if metal around lock has been damaged, (as diagram), be careful of any sharp metal sticking out, this may need gently tapping back, if it will prevent the Defender back plate from sitting flush.

2. Decide which direction the Defender will be most suitable, ie. it could point towards 3, 6, 9 or 12 o'clock, ( as shown below).

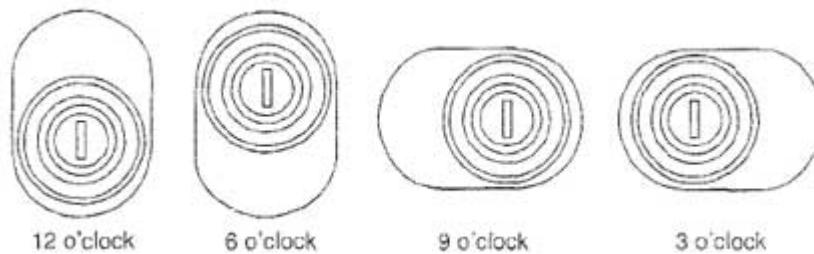

3. Position backplate over lock, ensuring that the hole is central to the lock, mark one hole in each corner, remove and drill with a sharp 3.5mm bit, remove swarf.

4. Apply silicone to back plate, then secure with rivets. Ensuring to pull the gun away from the door when rivets release the pin.

5. Now drill the holes for the remaining rivets and secure.

6. Apply silicone to inside the back of the Defender front cover and push over back plate, ensuring it is fully pushed on.

7. Finally, remove any excess silicone, and leave to dry.

