

Bulldog TrailClamp Fitting Instructions

Fig A


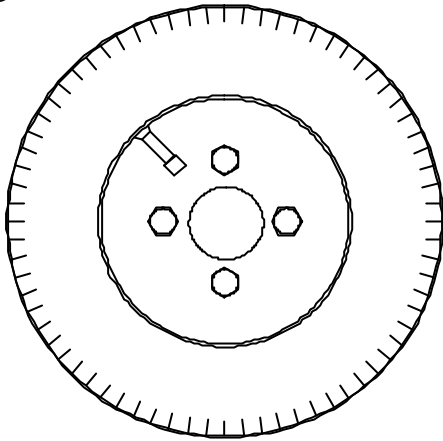


Fig B

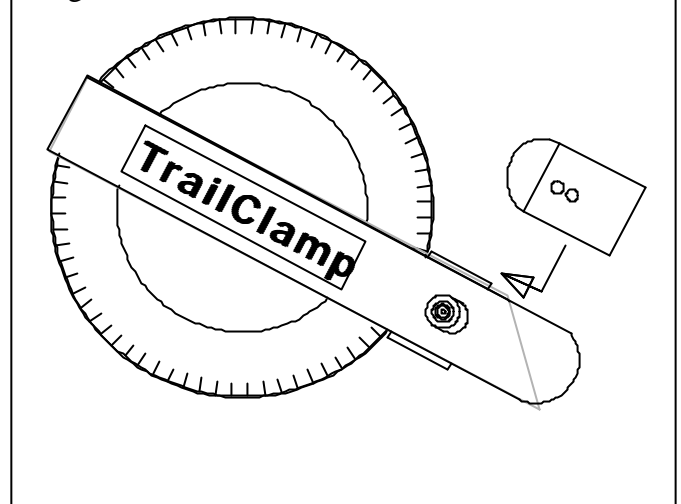

1. Ensure that tyre valve is positioned away from the tubes welded to the inside of the TrailClamp disc Fig (A).
2. Hook the TrailClamp arm around tyre, then slide return arm in around rear of tyre and lock by pressing plunge lock in until it clicks. Fig (B).
3. To remove clamp, insert key, rotate 1/2 turn, pull on key until lock pops out.

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray outside of lock body with WD40 (or equivalent) minimum every four months.

Key Security. Enter your key number here:

IMPORTANT - Your Bulldog product is supplied with two keys. Make a note of your personal key number in the space provided above and **keep it in a safe place**. Should you lose your keys, replacements can only be obtained from the manufacturer through your dealer.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

