


Saftiwindow Fittings

Single Sash Saftiwindows

Using the ref S36 "U" Brackets above and below the lock ensures that the channel is secured top and bottom.

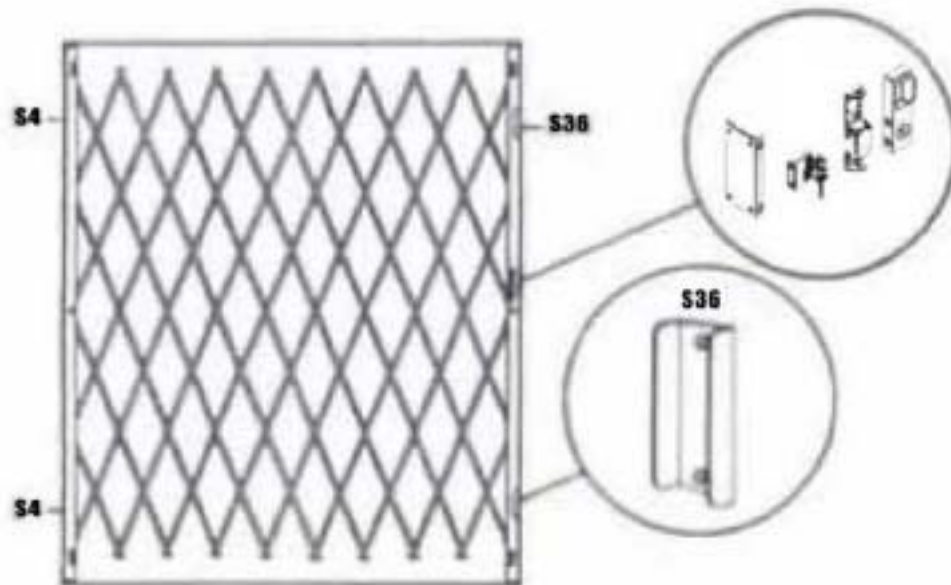

Double Sash Saftiwindows

Using two S35 "T" brackets ensures absolute rigidity in the centre.

