

RECOMMENDED FITTING INSTRUCTIONS

**GARAGE DEFENDER
FOR
UP AND OVER GARAGE DOOR**




Raw bolted to Concrete Base

PLEASE NOTE: THE UNIT MUST BE SECURED INTO GOOD SOLID CONCRETE

Remember to oil your padlock once a week – Keep your lock locking longer.

1. **Important Note: position both the base unit under garage door and position top unit to front of garage ensuring the door swing clears the padlock lug before permanently fixing as in diagram A.**
2. **Using the base unit as a template drill through the holes with a 10mm dia concrete drill 10 mm deep.**
3. **Remove the unit, and then re-drill the two holes with a 16mm dia concrete drill 90mm deep.**
4. **Clear dust from drilled holes.**
5. **Drop both security bolts into the unit's base and screw on the both shields before dropping into the prepared holes in the concrete.**
6. **Tighten the two security bolts evenly to a torque of 25-30 lbs.**
7. **Please note the external security fixing bolt may require a concrete pad.
If you have tarmac outside the garage door as in diagram B**

You can now sleep soundly at night knowing your pride and joy is safely secured in your garage.

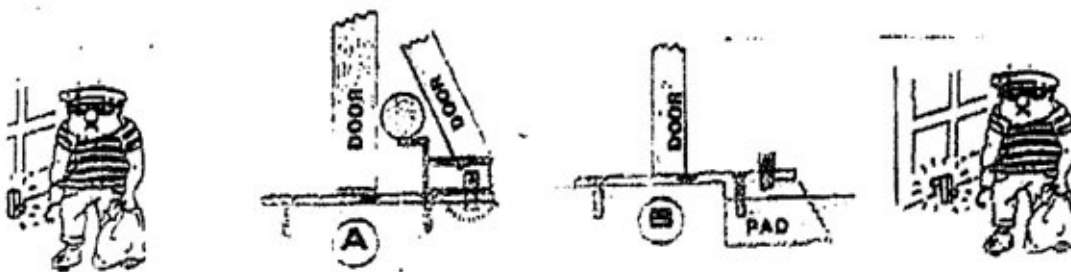

PLEASE NOTE

- Only Two fixing points are required.
Should Base not fit under garage door?
Option 1) Rebate Base Plate in Concrete
Option 2) Cut Off base Plate**